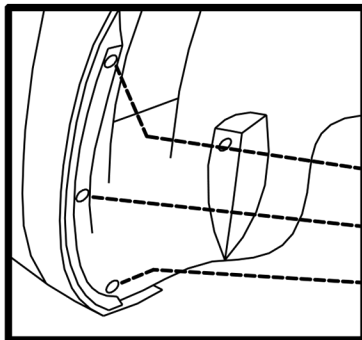

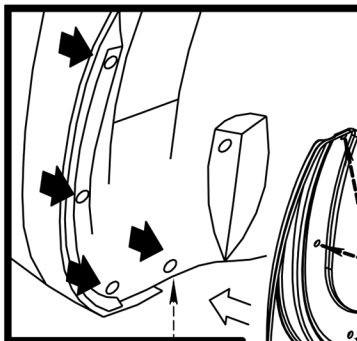


Mudflap rear SKODA SUPERB 2013->





Preparation

3x  original screw

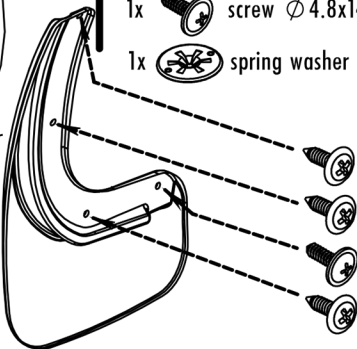


Installation

3x  original screw

1x  screw \varnothing 4.8x14mm.

1x  spring washer



Art.: EXP.NLF.45.11.E10

Set package

Mudflap - 2 pcs Screw \varnothing 4,8x14 mm - 2 pcs.
Spring washer - 2 pcs.