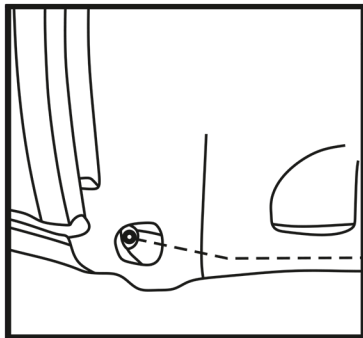

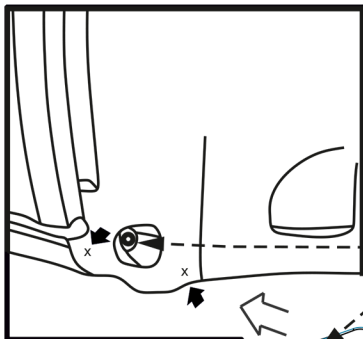


Mudflaps front VW Transporter T6, 2016->




Preparation

1x  Original screw



Installation

1x  Original screw

3x  Screw 4,2 x 16 (black)

1x  Bracket

1x  Metal clip

 Install bracket, using the original screw

 Install metal clip on the bracket

Art.: EXP.NLF.51.41.F18

Set package

Mudflap - 2 pcs. Screw 4,2 x 16 (TL-028) - 6 pcs.,
Metal clip (TL-039) - 2 pcs.,
Bracket (C-051.041-10.01) - 2 pcs.